

**IMPORTANT**

1. Always include complete heater model and serial number so that any specification change can be considered for parts shipment. It can save time and expense.
2. Specifications are subject to change without notice.
3. We reserve the right to substitute functional replacements
4. Order by Part Number. Do not order by Option Number.

Replacement Parts

Applies to: **Model F** and **Model FE**
Fan-Type, Gas-fired
Unit Heaters and
Model B and **Model BE**
Blower-Type, Gas-fired
Unit Heaters


**Model F, Fan-Type,
 Gravity Vent**

**Model B, Blower-Type,
 Gravity Vent**

***Model FE, Fan-Type,
 Power Vent**

***Model BE, Blower-
 Type, Power Vent**


*Models FE and BE are
 no longer manufactured.

Index

A	Hinge Pin Assy 16	Relay 4, 6, 14, 15
Air Shutter 12	I	Replacement Parts Tag 2
B	Ignition Controllers 5	Restrictor 8
Belt 10, 11	Ignition Conversion Kits 5	S
Belt Guard 19	K	Sensing Tube 14
Blocked Vent Switch 4	Key 8	Serial Number 2, 3
Blower 8	L	Starter 9
Blower Components 8	Latch Fastener 16	Starters 10
Blower/Filter Cabinet 19	Limit Control 4	Summer/Winter Switch 4
Blower Guard 19	Vertical Louver Assy 18	Swivel Connection 18
Burner Only 12	Low Ambient Fan Control 6	T
Burner Orifices 13	M	Terminal Strip 4
Burner Rack 12	Manifold 12	Thermocouple 13
Burner Rack Support 12	Model No. 2	Thermostat Bracket 5
Burner Rack Supports 16	Belt-Driven Motor 8	Thermostats 5
C	Blower Motor 9	Stepdown Transformer 6
Cabinet Parts 16	Blower Motors 10	Transformers 5
Capacitor 8, 14, 15	Direct Drive Motor 8	V
Carryover 12	Fan Motor 7	Shut-off Valve 12
Circuit Breaker 4	Venter Motor 14	Vent Cap 14, 15, 18
Contactor 9, 10	Motor Adjustment Mounting Assy 8	Vent Damper 5
D	Motor Band 8	Venter 14
Date of Manufacture 3	Motor Mounting Bracket 8	Venter Fan Blade 14
Dates of Introduction 3	Motor Support 8	Venter for Gravity-Vent Units 15
Downturn Nozzle Kit 20	Multiple Heater Control 6	Venter Gasket 14
Drive 10	N	Venter Motor and Wheel Assembly 14
Duct Flange 18	Nozzles 20	Venter Wheel 14
E	O	W
Electrical Components 4	Burner Orifices 12	Warranty 3
F	Overload 9, 10	
Fan Blades 7	P	
Fan Components 7	Paint 18	
Fan Control 4	Match-Lit Pilot 13	
Fan Guard 7	Spark Pilot 13	
Fan Motor Spacing 7	Pilot Shield 12	
Filters 19	Polytube Adapters 20	
Flame Sensor 13	Pressure Switch 14, 15	
Fuse 4	Blower Pulley 10, 11	
G	Motor Pulley 10, 11	
Gasket Kit 16	R	
Guards 19	Rating Plate 2	
H	References 3	
Hanger Kits 18		
Heat Exchangers 16		

Burner Rack and Components

Code	Description	Size										
		25	50	75	100	125	130	165	200	250	300	400
50	Burner Rack Assembly - Aluminized (includes burners and flash carryover; less pilot; less manifold & orifices; and less valve)	98983	98984	98985	98986	132753	98987	98988	98989	98990	98991	98992
	Burner Rack Assembly - Stainless Steel (includes burners and flash carryover; less pilot; less manifold & orifices; and less valve)	98993	98994	98995	98996	132755	98997	98998	98999	99000	99001	99002
50A	Burner only - Aluminized (qty of burners per Size in parenthesis)	94777 (2) (3) (4) (5) (6)					94781 (4) (5) (6) (8) (9) (12)					
	Burner only - Stainless Steel (qty of burners per Size in parenthesis)	97345 (2) (3) (4) (5) (6)					97348 (4) (5) (6) (8) (9) (12)					
51	Carryover Assembly	96769	47690	63128	96042	96044	96043	96042	96044	--	--	--
51A	Right Carryover Assembly	--	--	--	--	--	--	--	--	96045	96046	96045
51B	Left Carryover Assembly	--	--	--	--	--	--	--	--	96047	96047	96047
51C	Center Carryover Assembly	--	--	--	--	--	--	--	--	--	--	63156
52	Burner Rack Support	113936 (See illustration Code 111, page 16.)									113937	
53	Manifold only, less orifices, less valve	95434	95435	95436	95437	95440	95436	95437	95440	95441	95442	95443
54	Manifold with Natural Gas Burner Orifices for sea level* operation (less valve)	99003	99004	99005	99006	132749	99007	99008	99009	99010	99011	99012
	Manifold with Propane Gas Burner Orifices for sea level* operation (less valve)	99013	99014	99015	99016	132751	99017	99018	99019	99020	99021	99022
55	Burner Orifices	See chart on page 13.										
56	Pilot Shield (FE and BE Models and F and B Models with optional spark pilot)	97204										
57	Air Shutter Assembly (Same as Option ED1)	98476	98477	98478	98479	98480	98478	98479	98480	98481	98482	98483
58	Shut-off Valve with Union (Same as CE Option)	196910 - 1/2"										
		--	--	--	--	--	--	--	--	--	196911 - 3/4"	

* A manifold with "sea level" orifices also applies if the manifold pressure has been adjusted in the field for high altitude operation (check for manifold adjustment label). If the heater was factory equipped for high altitude operation (Option AB), select high altitude orifices separately from the chart on page 13. Check the heater rating plate to identify the elevation at which the heater was manufactured to operate.


**Code 50 -
Burner Rack
Assembly
(Less pilot,
manifold,
orifices, and
valve)**



Code 50A - Burner Only




Code 51 - Carryover Assembly

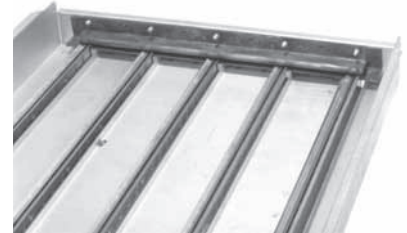


Code 53 - Manifold (less orifices)



**Code 54 - Manifold with Orifices
Code 55 - Burner Orifices**

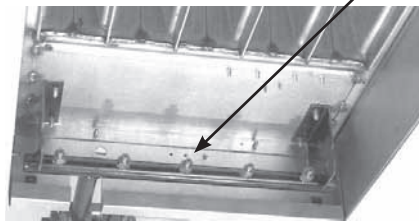

Code 56 - Pilot Shield

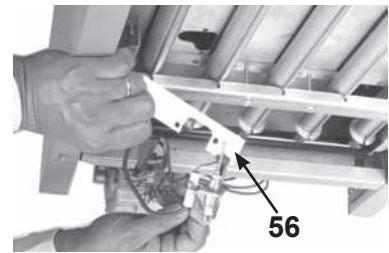

**Code 57 -
Air Shutter
Assembly**



Code 58 - Shutoff Valve with Union



**1/2" Valve
with Union,
P/N 196910**

**3/4" Valve
with Union,
P/N 196911**