

HEAT EXCHANGER BAFFLE ASSEMBLY

NOTES:

- When replacing a heat exchanger, check to see if the baffle assembly can be salvaged. If the baffle assembly cannot be salvaged, item 1 must be ordered separately and must be field-installed in the replacement heat exchanger. Baffle parts cannot be installed in the replacement heat exchanger at the factory. They must be ordered separately and installed in the field.
- All model EEDU units have a heat exchanger directional air baffle assembly.
- Model HEEDU was discontinued JUN 2011.
- Model HEEDU units designed for high CFM have only a rear top baffle support (item 7) and a rear top baffle (item 2). If these parts cannot be salvaged, order and install replacements.
- High CFM conversion instructions are included with model EEDU units. Refer to form I-EEDU listed in [Table 1](#) and contact the factory for the required label.

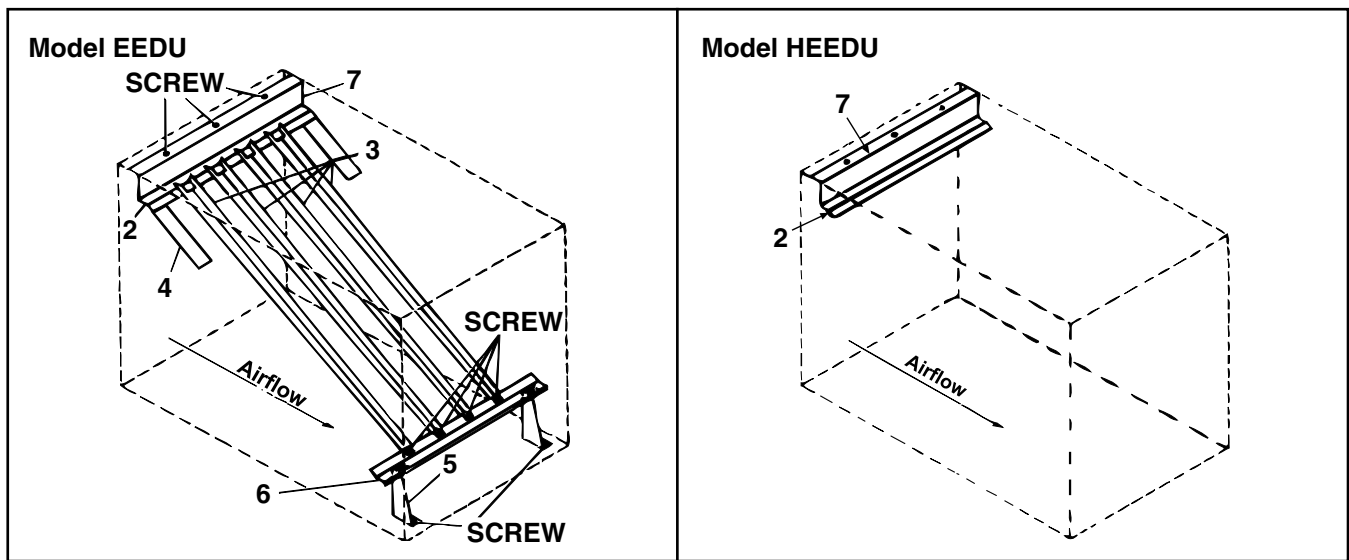


Figure 7. Heat Exchanger Baffle Assembly (Refer to [Table 10](#))

Table 10. Heat Exchanger Baffle Assembly											
Item No.	Component	Description	Unit Size								
			075, 100	125, 140	170	200	225	250	300	350	400
			PN (Quantity)*								
1	Baffle	Assembly	55094	55095	55519	55096	55520	55097	55539	55540	55541
2		Rear top	55116	55117	55118	55119	55120	55121	55122	55124	55126
3		Finger	45399 (3)	45399 (4)	45399 (5)	45399 (6)	45399 (7)	45399 (8)	45399 (10)	45399 (12)	45399 (14)
4		Side finger	55128 (2)					55128 (2)			
5	Bracket	Baffle support	55101 (2)				55101 (2)		55101 (4)		
6	Support	Baffle, bottom	46478	46484	52497	46489	52498	46494	52499	52500	52501
7		Baffle, rear top	55103	55104	55105	55106	55107	55108	55109	55111	55113

*Quantity is one (1) unless otherwise indicated.