

IMPORTANT

1. Always include complete heater model and serial number so that any specification change can be considered for parts shipment. It can save time and expense.
2. Specifications are subject to change without notice.
3. We reserve the right to substitute functional replacements
4. Order by Part Number not by Option Number.

Replacement Parts

Applies to: **Model F and Model FE**
Fan-Type, Gas-Fired
Unit Heaters and
Model B and Model BE
Blower-Type, Gas-Fired
Unit Heaters

**Model F, Fan-Type,
Gravity Vent**



**Model B, Blower-Type,
Gravity Vent**



***Model FE, Fan-Type,
Power Vent**



***Model BE, Blower-
Type, Power Vent**



*Models FE and BE are no longer manufactured.

Index

A

Air Shutter 12

B

Belt 10, 11
 Belt Guard 19
 Blocked Vent Switch 4
 Blower 8
 Blower Components 8
 Blower/Filter Cabinet 19
 Blower Guard 19
 Burner Only 12
 Burner Orifices 13
 Burner Rack 12
 Burner Rack Support 12
 Burner Rack Supports 16

C

Cabinet Parts 16
 Capacitor 8, 14, 15
 Carryover 12
 Circuit Breaker 4
 Contactor 9, 10

D

Date of Manufacture 3
 Dates of Introduction 3
 Downturn Nozzle Kit 20
 Drive 10
 Duct Flange 18

E

Electrical Components 4

F

Fan Blades 7
 Fan Components 7
 Fan Control 4
 Fan Guard 7
 Fan Motor Spacing 7
 Filters 19
 Flame Sensor 13
 Fuse 4

G

Gasket Kit 16
 Guards 19

H

Hanger Kits 18
 Heat Exchangers 16
 Hinge Pin Assembly 16

I

Ignition Controllers 5
 Ignition Conversion Kits 5

K

Key 8

L

Latch Fastener 16
 Limit Control 4
 Vertical Louver Assembly 18
 Low Ambient Fan Control 6

M

Manifold 12
 Model No. 2
 Belt-Driven Motor 8
 Blower Motor 9
 Blower Motors 10
 Direct Drive Motor 8
 Fan Motor 7
 Venter Motor 14
 Motor Adjustment Mounting Assembly 8
 Motor Band 8
 Motor Mounting Bracket 8
 Motor Support 8
 Multiple Heater Control 6

N

Nozzles 20

O

Burner Orifices 12
 Overload 9, 10

P

Paint 18
 Match-Lit Pilot 13
 Spark Pilot 13
 Pilot Shield 12

Polytube Adapters 20
 Pressure Switch 14, 15
 Blower Pulley 10, 11
 Motor Pulley 10, 11

R

Rating Plate 2
 References 3
 Relay 4, 6, 14, 15
 Replacement Parts Tag 2
 Restrictor 8

S

Sensing Tube 14
 Serial Number 2, 3
 Starter 9
 Starters 10
 Swivel Connection 18

T

Terminal Strip 4
 Thermocouple 13
 Thermostat Bracket 5
 Thermostats 5
 Stepdown Transformer 6
 Transformers 5

V

Shut-off Valve 12
 Vent Cap 14, 15, 18
 Vent Damper 5
 Venter 14
 Venter Fan Blade 14
 Venter for Gravity-Vent Units 15
 Venter Gasket 14
 Venter Motor and Wheel Assembly 14
 Venter Wheel 14

W

Warranty 3

Burner Rack and Components

Code	Description	Size										
		25	50	75	100	125	130	165	200	250	300	400
50	Burner Rack Assembly, Aluminized (includes burners and flash carryover; less pilot; less manifold & orifices; and less valve)	98983	98984	98985	98986	132753	98987	98988	98989	98990	98991	98992
	Burner Rack Assembly, Stainless Steel (includes burners and flash carryover; less pilot; less manifold & orifices; and less valve)	98993	98994	98995	98996	132755	98997	98998	98999	99000	99001	99002
50A	Burner only, Aluminized (qty of burners per Size in parentheses)	94777 (2) (3) (4) (5) (6)					94781 (4) (5) (6) (8) (9) (12)					
	Burner only, Stainless Steel (qty of burners per Size in parentheses)	97345 (2) (3) (4) (5) (6)					97348 (4) (5) (6) (8) (9) (12)					
51	Carryover Assembly	96769	47690	63128	96042	96044	96043	96042	96044	—	—	—
51A	Right Carryover Assembly	—	—	—	—	—	—	—	—	96045	96046	96045
51B	Left Carryover Assembly	—	—	—	—	—	—	—	—	96047	96047	96047
51C	Center Carryover Assembly	—	—	—	—	—	—	—	—	—	—	63156
52	Burner Rack Support	113936 (See illustration Code 111, page 16.)								113937		
53	Manifold only, less orifices, less valve	95434	95435	95436	95437	95440	95436	95437	95440	95441	95442	95443
54	Manifold with Natural Gas Burner Orifices for sea level* operation (less valve)	99003	99004	99005	99006	132749	99007	99008	99009	99010	99011	99012
	Manifold with Propane Gas Burner Orifices for sea level* operation (less valve)	99013	99014	99015	99016	132751	99017	99018	99019	99020	99021	99022
55	Burner Orifices	See chart on page 13.										
56	Pilot Shield (FE and BE Models and F and B Models with optional spark pilot)	97204										
57	Air Shutter Assembly (Same as Option ED1)	98476	98477	98478	98479	98480	98478	98479	98480	98481	98482	98483
58	Shut-off Valve with Union (Same as CE Option)	196910, 1/2"										
		—	—	—	—	—	—	—	—	—	—	196911, 3/4"

* A manifold with "sea level" orifices also applies if the manifold pressure has been adjusted in the field for high altitude operation (check for manifold adjustment label). If the heater was factory equipped for high altitude operation (Option AB), select high altitude orifices separately from the chart on page 13. Check the heater rating plate to identify the elevation at which the heater was manufactured to operate.

**Code 50 -
Burner Rack
Assembly
(Less pilot,
manifold,
orifices, and
valve)**



Code 50A - Burner Only




Code 51 - Carryover Assembly




Code 53 - Manifold (less orifices)



**Code 54 - Manifold with Orifices
Code 55 - Burner Orifices**

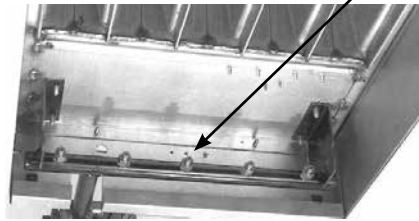

Code 56 - Pilot Shield

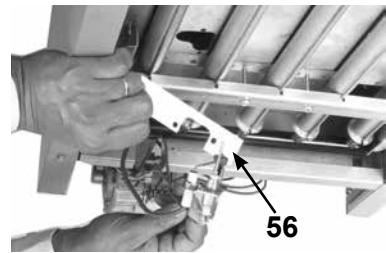

**Code 57 -
Air Shutter
Assembly**



Code 58 - Shutoff Valve with Union



**1/2" Valve
with Union,
PN 196910**

**3/4" Valve
with Union,
PN 196911**