
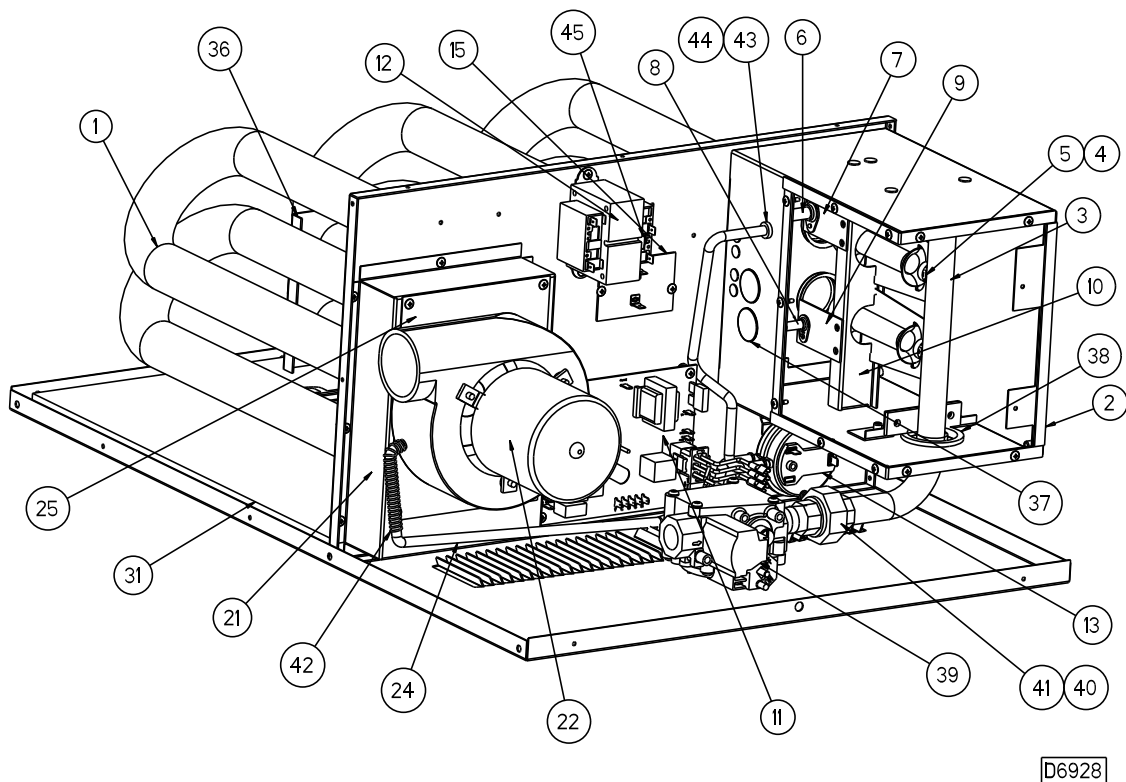


**MODEL “SF” 30-75 MBH “SEPARATED COMBUSTION”
REPLACEMENT PARTS FOR UNITS WITH DIRECT SPARK IGNITION**

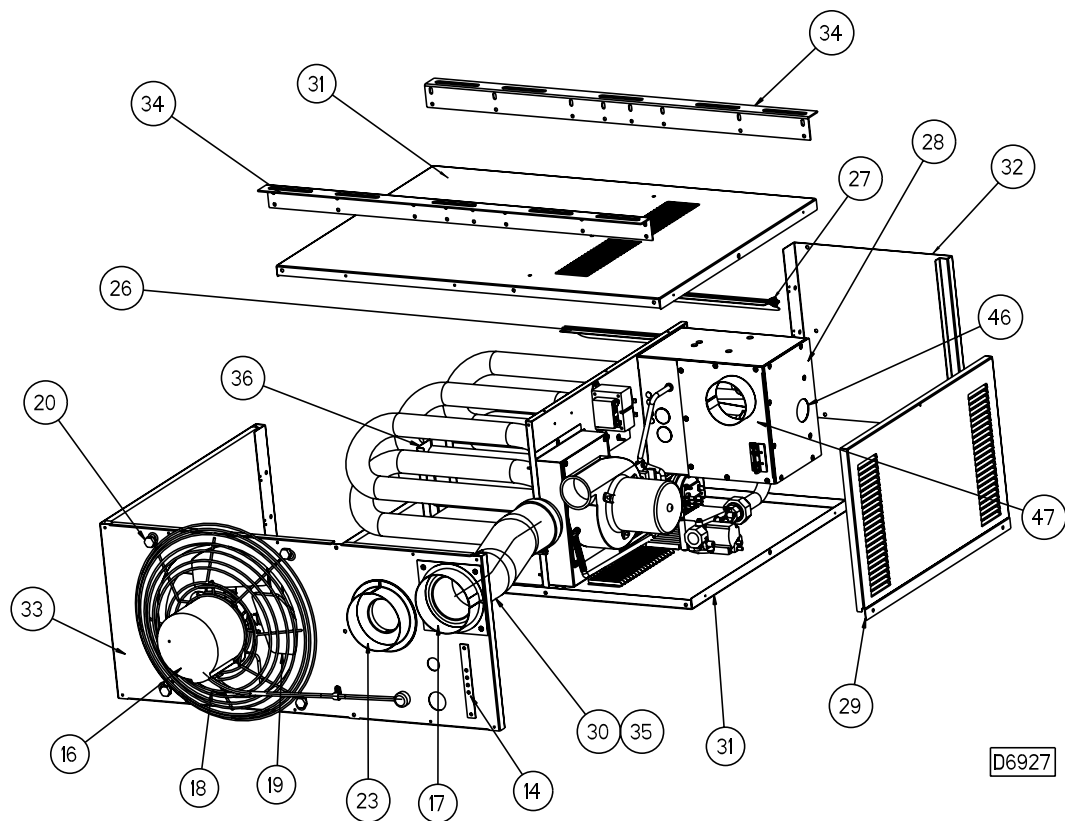

MODEL “SF” 30-75 MBH “SEPARATED COMBUSTION” REPLACEMENT PARTS FOR UNITS WITH DIRECT SPARK IGNITION

ITEM NO.	“SF” MODEL SIZE (MBH)		30	45	60	75
	ITEM DESCRIPTION		PART NO.			
	NO. OF TUBES, BURNERS ORIFICES REQ'D PER MODEL		2	3	4	5
1	VESTIBULE PANEL/TUBE ASS'Y (HEAT EXCHANGER)		507R06685-001	507R06686-001	507R06687-001	507R06688-001
2	BURNER BOX SUB-ASS'Y		502R06419		502R06420	
3	MANIFOLD		J37R04684-030	J37R04684-045	J37R04684-060	J37R04684-075
4	INSHOT BURNER		J37R04693			
5	STANDARD ORIFICE	NATURAL GAS (#49)	J36R04694-001			
		PROPANE (LP) GAS (#57)	512R08532-002			
6	SPARK IGNITOR*		J38R06891-001			
7	SPARK IGNITOR BRACKET*		252R06949			
8	FLAME SENSOR*		J38R06890-001			
9	FLAME SENSOR BRACKET*		252R06950			
10	BURNER BRACKET		252R06532	252R06533	252R06534	252R06535
11	CONTROL BOARD*		J28R06881			
12	TRANSFORMER, 50 VA, 115/24V		J14R03245-012			
13	AIR PRESSURE SWITCH – STD ALT (0-4,999 FT)		J11R06778-002			
13	AIR PRESSURE SWITCH – HIGH ALT (5,000 FT+)		J11R06778-002			
14	TERMINAL BLOCK PLATE		J09R04609			
15	HIGH LIMIT SWITCH W/ MOUNTING PLATE		J11R04768			
16	FAN MOTOR (ODP)		J31R04766		J31R04091	
17	INLET AIR COLLAR ASS'Y		257R06621			
18	OSHA FAN GUARD (SIZES 60 & UP, INCL. A MOTOR MTG. PLATE)		J32R04884		J32R04840	
19	STANDARD FAN		J34R06999-001	J34R06999-002	J34R06999-101	
20	FAN / GUARD / MOTOR MOUNT HARDWARE KIT		261R04963-001		261R04963-002	
21	**FLUE COLLECTOR		507R04696-030	507R04697-045	507R04698-060	507R04699-075
22	POWER VENTER (DRAFTER) ASS'Y		J35R04700			
23	FLUE COLLAR ASS'Y		507R04725			
24	VINYL TUBING (PRESSURE SWITCH)		261R04964-001			
25	POWER VENTER MOUNTING PLATE		507R04876			
26	LOUVER (QTY. REQ'D PER MODEL)		257R04587-011 (3)		257R04587-011 (5)	
27	LOUVER SPRINGS (QTY. REQ'D PER MODEL)		J26R01960 (3)		J26R01960 (5)	
28	BURNER BOX FRONT PANEL		251R06609		251R06610	
29	SERVICE PANEL		251R04718		251R04719	
30	HOSE CLAMP (2 PER UNIT)		J40R01745-014			
31	TOP / BOTTOM PANEL W / INSULATION		251R04702			
32	FRONT JACKET PANEL		251R04713		251R04714	
33	REAR / SIDE JACKET PANEL		251R06629		251R06630	
34	HANGER (FRONT AND REAR)		252R04730			
35	INLET AIR HOSE		H07R06627			
36	TUBE SUPPORT BRACKET KIT		261R06577-030	261R06577-045	261R06577-060	261R06577-075
37	METAL HOLE PLUG		J07R06593			
38	LARGE GROMMET		J07R02872-001			
39	DIRECT SPARK GAS VALVE, SINGLE STAGE*	NATURAL GAS	J28R06892-001			
		PROPANE (LP) GAS	J28R06892-002			
40	PIPE UNION		J40R00605-003			
41	PIPE NIPPLE		J40R00601-001			
42	SPRING		J26R06480			
43	PRESSURE TAP FITTING		J40R02876-001			
44	PRESSURE TAP FITTING NUT		J23R01130-017			
45	GREEN GROUND SCREW		J21R01287			
46	BURNER BOX VIEW PORT PANEL		251R06614		251R06615	
47	BURNER BOX INLET AIR PANEL (INCLUDES WIRE SEAL BRACKETS)		251R06616		251R06617	
N/S	IGNITION CABLE – 36 INCHES LONG*		J28R06971-002			
N/S	MOLEX CONNECTOR ASSEMBLY*		J09R06887			
N/S	MANIFOLD MOUNTING ANGLE (2 PER UNIT)		252R06423			
N/S	FLAME SENSOR WIRE – 21 INCHES LONG*		260R08248-001			

Notes:

* See page 13 for units manufactured prior to 1/1/06.

** When replacing a flue collector, make sure that the flue collector box is sealed completely to the vestibule panel using RTV Sealant.

N/S - Part not shown or numbered.