


Heat Exchangers (cont'd) - Models PDH, SDH, RDH, SHH, RHH

CODES 134 and 135 -

Replacement Heat Exchangers - Model SHH and Model RHH


Code 134A - Primary Heat Exchanger for Model SHH

Code 135A - Primary Heat Exchanger for Model RHH

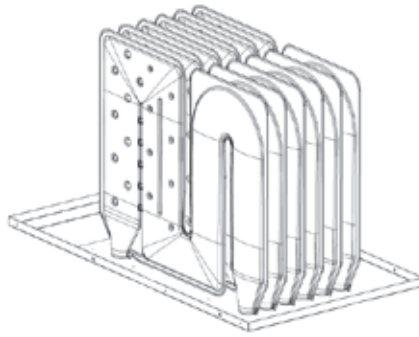

Code 134B - Secondary Heat Exchanger for Model SHH

Code 135B - Secondary Heat Exchanger for Model RHH

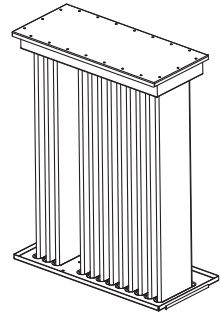

CODE	Description	Control Side (facing discharge)	SHH 130	SHH 180	SHH 260	SHH 350
134A	Replacement Primary Heat Exchanger	Left (Opt AJ1)	271468	271469	271470	271471
		Right (Opt AJ2)	271472	271473	271474	271475
134B	Secondary Heat Exchanger	Left (Opt AJ1)	257041	255778	255363	254013
		Right (Opt AJ2)	257953	257954	257955	257956

CODE	Description	Control Side (facing discharge)	RHH 130	RHH 180	RHH 260	RHH 350
135A	Primary Heat Exchanger	Left (Opt AJ1)	271468	271469	271470	271471
		Right (Opt AJ2)	271472	271473	271474	271475
135B	Secondary Heat Exchanger	Left (Opt AJ1)	263644	263643	263642	263641
		Right (Opt AJ2)	263633	263634	263635	263636

Flue Collection Box and Burner Shield


Flue Collection Box and Burner Shield			PDH / SDH / RDH												
CODE	Description		Control Side (facing discharge)	75	100	125	150	175	200	225	250	300	350	400A	
136	Flue Collection Box Assy (with side, end, & venter gaskets)	with ALL Gas Control Options EXCEPT Opt AG58 or D12G (8:1 modulation) - prior to Sept. 22, 2010	Left (Opt AJ1)	209855	209856	209857	209858	209859	209860	209861	209862	209863	209864	209865	
			Right (Opt AJ2)	213317	213318	213319	213320	213321	213322	213323	213324	213325	213326	213327	
		with ALL Gas Control Options EXCEPT Opt AG58 or D12G (8:1 modulation) - after Sept. 22, 2010	Left (Opt AJ1)	209855	209856	209857	209858	260293	260294	260295	260296	260297	260298	260299	
			Right (Opt AJ2)	213317	213318	213319	213320	260307	260308	260309	260310	260311	260312	260313	
		RDH only with 8:1 modulation Gas Control Option AG58 or D12G	Left (Opt AJ1)	--	--	--	--	260300	260301	260302	260303	260304	260305	260306	
			Right (Opt AJ2)	--	--	--	--	260314	260315	260316	260317	260318	260319	260320	
137A	Burner Shield Assembly (does not include burner end shield; see 137B)	Left (Opt AJ1)	209816	209817	209820	209821	209816	209817	209817	209818	209819	209821	209822		
		Right (Opt AJ2)	213310	213311	213312	213313	213310	213311	213311	213314	213315	213313	213316		
137B	Burner End Shield w/Sight Glass	Left (Opt AJ1)	260052 (does not include controller or bracket mounted on this shield in Control Opts AG58 & D12G)												
		Right (Opt AJ2)	260054 (does not include controller or bracket mounted on this shield in Control Opts AG58 & D12G)												
138A	Condensate Drain Cover or Optional Fitting			(2) 216338 Drain Cover or (2) 216337 Optional Drain Fitting											
138B	Condensate Drain Gasket			(2) 216339											

CODE	Description	RHH/SHH	130	180	260	350
136	Flue Collection Box Assembly including side, end, and venter gaskets	Left (Opt AJ1)	257380	257380	257381	257382
		Right (Opt AJ2)	257982	257982	257983	257984
137A	Burner Shield Assembly (does not include burner end shield; see 137B below)	Left (Opt AJ1)	255798	209816	209819	222394
		Right (Opt AJ2)	257961	213310	213315	257962
137B	Burner End Shield w/Sight Glass (does not include controller or bracket mounted on this shield in Control Opts AG58 & D12G)	Left (Opt AJ1)	260052			
		Right (Opt AJ2)	260054			
138A	Condensate Drain Fitting		(2) 216337			
138B	Condensate Drain Gasket		(2) 216339			
139	Condensate Drain Freeze-Resistant Trap (required on Model RHH)		271064			

Code 137B - Burner Shield End with Sight Glass



Code 139 - Freeze-Resistant Drain Trap, P/N 271064

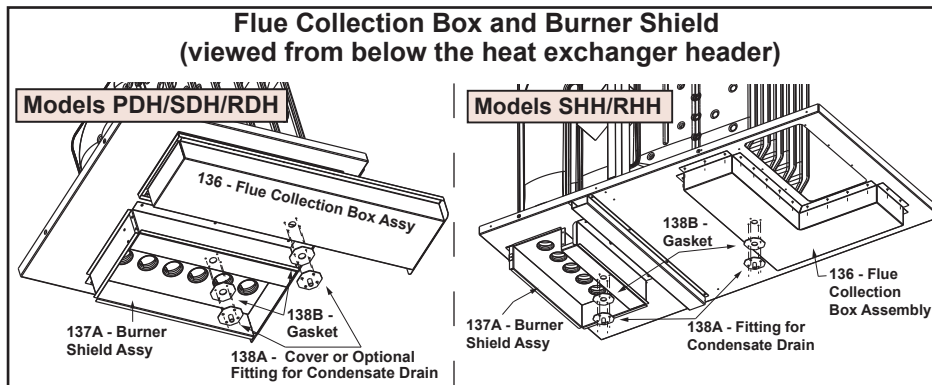

Condensate Drain Sub-Assembly (used on PDH / SDH / RDH)

