

AQ2000 Series



AQUATROL THERMOSTAT WIRING



INSTALLATION INSTRUCTIONS

Aquatrol zoning modules are compatible with any digital thermostat. The AQ1000 digital communicating thermostats have been designed to enhance the Aquatrol system functionalities. Non-communicating dry-contact thermostats provide the needed heat signals for operation.

AQ1000TN2 and AQ1000TP2	Battery-powered/ Dry-contact Thermostats	24-VAC Thermostats
Connect TH terminals of the thermostat to Rh and W terminals of the zone module (no polarity to observe).	Connect Rh and W terminals of the thermostat to Rh and W terminals of the zone module.	1. If any, remove jumper between Rc and R on thermostat. 2. Connect 24 VAC from transformer to C and Rc terminals of thermostat. 3. Connect Rh and W terminals of the thermostat to Rh and W terminals of the zone module.

Aquatrol zoning modules are compatible with any digital thermostat. The AS1000 digital communicating thermostats have been The AQ panels are equipped with a 38 VA transformer which leaves between 27 and 34 VA available (depending on the panel model) to power thermostats or valves. Honeywell's VisionPRO, FocusPRO and PRO thermostat lines draw less than 0.5 VA for each thermostat. Honeywell's Prestige HD thermostat draws 2.7 VA each under normal usage. If additional VA is needed for the system, use a second transformer.

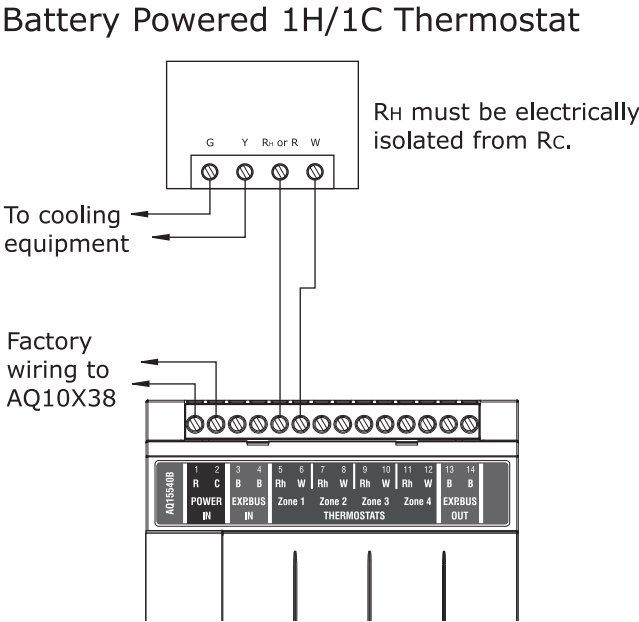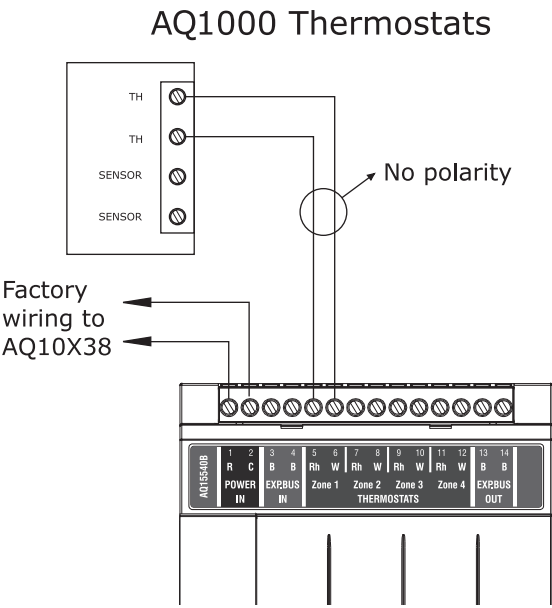

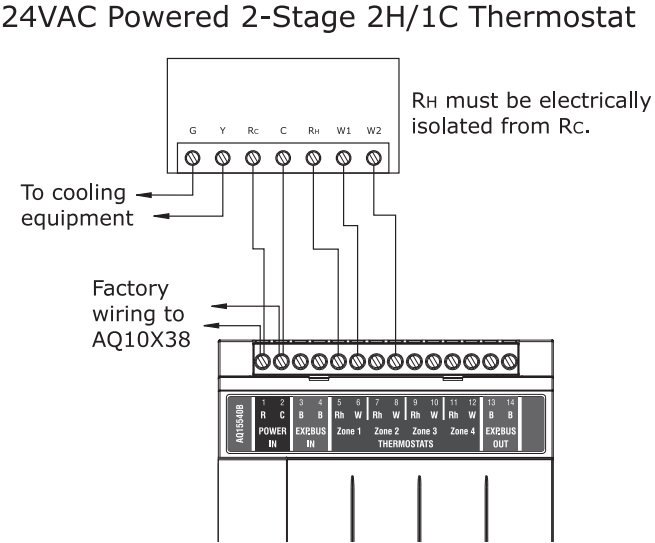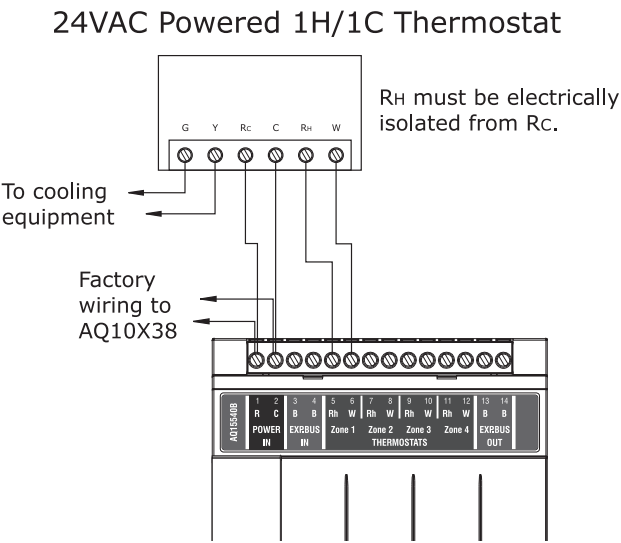

Automation and Control Solutions
Honeywell International Inc.
1985 Douglas Drive North
Golden Valley, MN 55422

Honeywell Limited-Honeywell Limitée
35 Dynamic Drive
Toronto, Ontario M1V 4Z9
customer.honeywell.com

© U.S. Registered Trademark
© 2010 Honeywell International Inc.
69-2394—02 T.W. Rev. 06-10
Printed in China

