
ABBREVIATIONS
EA: Exhaust Air to outside
OA: Outside Air intake
RA: Room Air to be exhausted
FA: Fresh Air to inside


INSTALLATION ORIENTATION
Unit may be installed in any orientation.

NOTE
1.UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.


2.SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

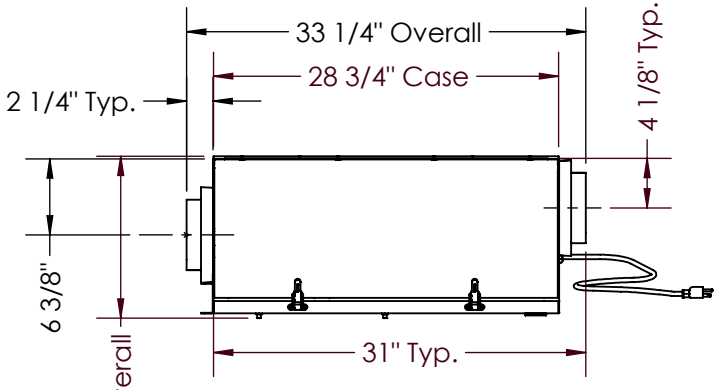


TOP VIEW

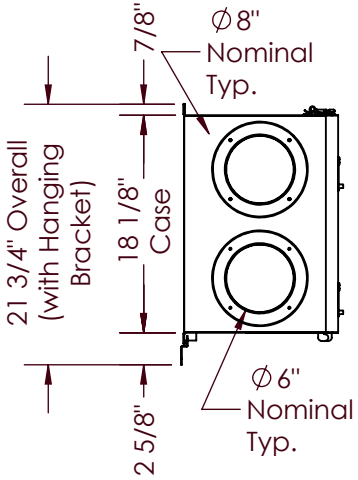

LEFT VIEW

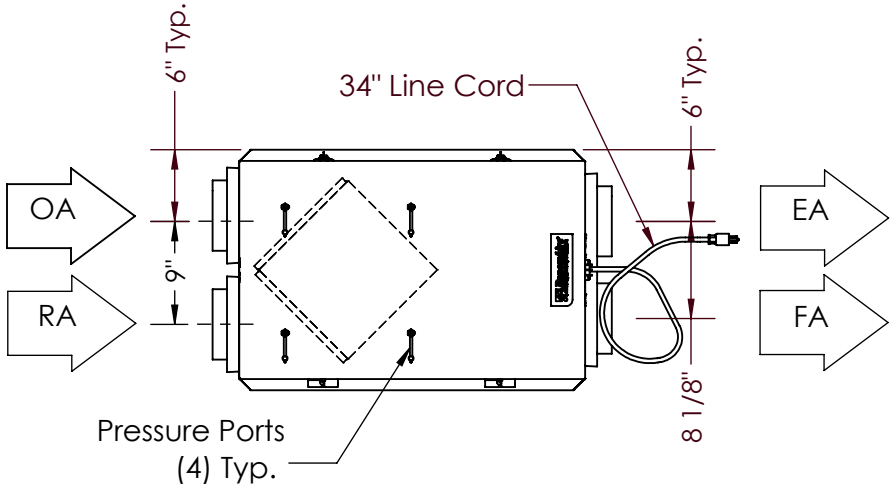

FRONT VIEW

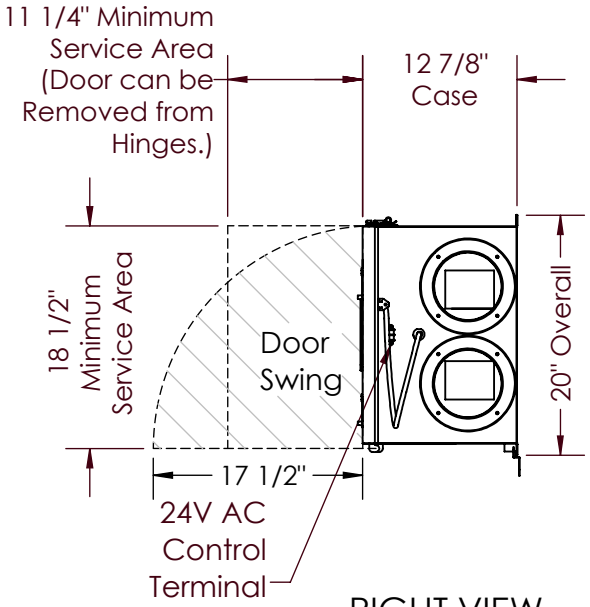

RIGHT VIEW

Model: EV130
Drawing Type: Unit Dimension
Version: JUN18

RenewAire®
Energy Recovery Ventilation