ITEMS THAT ARE HIGHLIGHTED ARE POPULAR ITEMS
ITEMS WITH CONVERSATION BUBBLE GIVE MORE INFO

Form P-PREEVA (Version 11-15)
Obsoletes Form P-PREEVA (Version 08-15)

FX-05 & FX-06 CONTROLLERS ARE N/A SOME RETROFITS ARE AVAILABLE

IMPORTANT

1. **Always include complete heater model and serial number so that any specification change can be considered for parts replacement. It can save time and expense.**
2. **In keeping with our policy of continuous product improvement, we reserve the right to alter any information shown here. Specifications are subject to change without notice.**
3. **We reserve the right to substitute functional replacements**
4. **Order by P/N; not Heater Option Designation.**

Replacement Parts

Applies to: **Indoor Model PDH, Model SDH, Model PEH, Model PXH, and Model SHH; and Outdoor Model RDH, Model REH, Model RXH, and Model RHH**

Indoor Models



SDH Gas-Fired Heat, Separated Combustion



PDH Gas-Fired Heat, Power Vent



PEH Electric Heat



PXH Air Handler



SHH Gas-Fired Heat, High Efficiency, Separated Combustion

Outdoor Models



RDH, Gas-Fired Heat, Power-Vented (with outside air hood attached)



REH Electric Heat



RXH Air Handler (with hood)



RHH Gas-Fired Heat, High-Efficiency, Power Vented (outside air hood attached)

Index

A
Air Proving Switch 3
Amplifiers 11
AquaSaver Timed Controls 44

B
Ball Joint 29
Ball Valve 5
Ball Valve Actuator 5
Bearings 21
Belts 21
Bleed Line Hose 44
Blowers 20
Burner Assembly 20
Burner End Shield 19
Burner Shield 19

C
Cabinet Doors 36
Cabinet Parts - Cooling Coil Module 24
Cabinet Parts - Indoor High-Efficiency Model SHH 42
Cabinet Parts - Indoor Model PDH 38
Cabinet Parts - Indoor Model PEH 40
Cabinet Parts - Indoor Model SDH 39
Cabinet Parts - Mixing Box 30
Cabinet Parts - Outdoor High-Efficiency Model RHH 42
Cabinet Parts - Outdoor Model RDH 37
Cabinet Parts - Outdoor Model REH 41
Cabinet Parts for Option ECC Evaporative Cooling Module 43
Capacitor 16, 27
Reheat Compressor 27
Contactor 7, 13
Convenience Outlet 9
Crankcase Heater 27
Curb Adapter 35

D
Mixing Box Damper Controls 29
Damper Arm 29
Damper Assy (Option AR8) 28
Damper Rod 29
Dampers 29, 30
Dehumidistat, Option CL47 12
Digital Controller FX05 for Opt DG 6
Dirty Filter Switch 3
Discharge Air Sensor 6
Discharge Plenum 32
Distribution Block 7
Door 30, 32
Door Latch 30, 32, 36
Door Switch 9
Downturn Plenum 32
Drain Cover 19
Drain Fitting 19
Drain Gasket 19
Condensate Drain Freeze-Resistant Trap 19
Drive Components 21
DSI (Direct Spark Ignition) Control Board 3
Duct Flange 28, 32
Ductstat 5, 10
Ductstat Stage Adder 10

E
Economizer Logic Module 29, 30
Electrical Component Locations 3
Electric Heating Element 7
Electric Heating Element Limit Control 7
Electric Heat Section Electrical Compartment 6, 7
Electrode 20
Electronic Filter 6
Enthalpy Sensor 29
Evaporative Cooling Media Pads 43
Evaporative Cooling Module 43

F
Feed Line 44
Fill and Drain Kits 45
Electronic Filter 5
Filter Drier 27
Filters 28
Firestat 10
Flame Sensor 20
Float Switch 44
Float Valve 44
Flue Collection Box 19
Freeze Protection Controls 45
Freezestat 5
Frostat 26, 27
Fuse 3, 7

G
Gas Conversion Kits 20
Gas Pressure Switch 5
Gas Valve (See Form P-VALVES) 5

H
Heat Exchanger 18, 19
High Ambient Limit Control 10
Hinge 36
Inlet Air Hood (Option AS2) 28
Horizontal Vent/ Combustion Air Terminal Kit (Same as Option CC6) 18
Rubber Hose 44

I
ID Plug 4
Inlet Screen 28

L
Label 36
High Temperature Auto Reset Limit 3
Reverse Flow Limit Switch 9
Louvers 32, 33

M
Manifold Arrangement -- 8:1 Turndown 5
Media 43
Microprocessor Timer 44
Modulating Gas Valve 5
Damper Motor 29
Discharge Damper Motor 32
Motor Base 20
Blower Motors 13, 16

N
Nozzles 32, 33

O
Gas Orifice 20
Orifice Adapter Bushing 20
Outside Air Relative Humidity Transmitter, Option DT5 12
Overloads 13

P
Paint 36
Phase Loss Control 3
Plug-in Cards 6
Potentiometer 29
Pre-Filters (Option PF4 and PF5) 43
Combustion Air Pressure Switch 3, 4
Pulleys 21
Pump 44
Pump and Float Control 44
Pump Support 44

R
Rating Plate 2
DX Cooling Cabinet with Reheat 27
Relay 3, 4, 7, 45
Time Delay Relay 5
Remote Console 12
Remote User Interface 12
Primary Air Restrictor 20
Return Air Controller 29
Reverse Flow Limit Switch 9
Roof Curb 34, 35, 36
Room Command Module 12

S
Intake Screen 44
SCR Power Controller 7
Sensing Tube Assembly 21
Sensor 10, 11
Sensor Mixing Tube Holder 6
Serial No. 2
Service Switch 9
Damper Motor Connecting Shaft 29
Shaft (Blower) 21
Signal Conditioner 5
Smoke Detector 10
2-Way Solenoid Valve 45
3-Way Solenoid Valve 45
Spring Isolation 20
Sprinkler Pipe 44
Starters 13
Step Controller 7
Disconnect Switch 13
Pressure Null Switch 29
Pressure Switch (refrigerant) 27
2-position Switch 10

T
Static Pressure Tap 16
Temperature Controller 45
Terminal Block 44
Terminal Board for Thermostat 3
Thermostatic Expansion Valve for Reheat Circuit 27
Thermostats 12
Time Delay Relay 5, 6
Transducer 5
Transformer 3, 4, 7, 16, 44

U
Ultra-Violet, Germicidal Light 27

V
Ball Valve 44
Variable Frequency Drive 3, 4
Vent/Combustion Air Kits - SDH & SHH 17
Vent Cap 17
Venter Block Assembly 17, 42
Venter Components 16, 17
Venter Housing 16, 17
Venter Motor 16, 17
Venter Motor and Wheel Assembly 16, 17
Venter Motor Capacitor 16
Venter Speed Controller 6
Vertical Vent - Model RDH 17
Vertical Vent/Combustion Air Terminal Kit (Same as Option CC2) 17, 18

W
Water Hammer Arrestor 44
Wheel 16, 17

CODE 110 - Blower Motor (cont'd)										Starter (AN10)	P/N	Starter Overload			P/N
Type	HP	Option AL	P/N	Mfr's No.	Frame	Fla	Shaft	Volt	ph	Mfr's No.		Min	Max	GE #	
EE	2	36, 37, 38	**159027**	E1017	145T	2.9	7/8"	480	3	CL00A310T-1	**151275**	2.5	4.1	RTA1-K	**151190**
EE	2	36, 37, 38	**158176**	AOS H965V1	P145T	2.1	7/8"	575	3	CL00A310T-1	**151275**	1.9	2.7	RTA1-J	**151189**
EE	3	39	**159186**	B-35L405S489G3	145T	8.3	7/8"	208	3	CL00A310T-1	**151275**	8	12	RTA1-N	**151193**
EE	3	39	**159028**	B-EM3158T	145T	7.4	7/8"	240	3	CL00A310T-1	**151275**	5.5	8.5	RTA1-N	**151192**
EE	3	39	**159028**	B-EM3158T	145T	3.7	7/8"	480	3	CL00A310T-1	**151275**	2.5	4.1	RTA1-K	**151190**
EE	3	39	**159030**	B-35L405S709G1	145T	3	7/8"	575	3	CL00A310T-1	**151275**	2.5	4.1	RTA1-K	**151190**
EE	5	27	**159029**	E204	H182T	13.9	1-1/8"	208	3	CL02A310T-1	**151277**	10	16	RTA1-P	**151194**
EE	5	27	**159029**	E204	H182T	11.6	1-1/8"	240	3	CL01A310T-1	**151276**	10	16	RTA1-P	**151194**
EE	5	27	**159029**	E204	H182T	5.8	1-1/8"	480	3	CL00A310T-1	**151275**	5.5	8.5	RTA1-M	**151192**
EE	5	27	**111602**	BAL-M3613T-5	184T	4.8	1-1/8"	575	3	CL00A310T-1	**151275**	4	6.3	RTA1-L	**151191**


CODE 113 - Two-Speed Blower Motors

HP	P/N	Magnetec No.	Volt	PH	Frame	Shaft Diameter	Overload		ABB Motor Starter Pkg	P/N
							High Speed	Low Speed		
1-.44	**105641**	M124	208	3	M145T	7/8	3.8	2.4	A16ST-80H2K	**114971**
1-.44	**105641**	M124	240	3	M145T	7/8	3.4	2.2	A16ST-80H2K	**114971**
1-.44	**105642**	M109	480	3	M145T	7/8	1.7	1.1	A16ST-51F2G	**114972**
1.5-.68	**105643**	M125	208	3	N145T	7/8	5.4	3.1	A16ST-80J2M	**114973**
1.5-.68	**105643**	M125	240	3	N145T	7/8	4.9	2.8	A16ST-80J2M	**114973**
1.5-.68	**105644**	M104	480	3	N145T	7/8	2.4	1.4	A16ST-51G2J	**114974**
2-.88	**105645**	M220	208	3	S182T	1 1/8	6.5	4.2		**114975**
2-.88	**105645**	M220	240	3	S182T	1 1/8	5.9	3.8	A16ST-80K2M	**114976**
2-.88	**105646**	M207	480	3	S182T	1 1/8	3.4	2.1	A16ST-51H2K	**114977**
3-1.3	**105647**	M221	208	3	S184T	1 1/8	9.3	5.3	A16ST-80M2P	**114978**
3-1.3	**105647**	M221	240	3	S184T	1 1/8	8.4	4.8	A16ST-80M2P	**114978**
3-1.3	**105648**	M208	480	3	S184T	1 1/8	4.6	2.6	A16ST-51J2L	**114979**
N.O. Auxiliary Contacts, Option AO3, AEG Model HS17.10, 10A, 600 V, **P/N 115951**										
N.C. Auxiliary Contacts, Option AO4, AEG Model HS17.01, 10A, 600 V, **P/N 115952**										


Venter Components Models PDH, SDH & RDH

CODE	Description		PDH / SDH / RDH										
			75	100	125	150	175	200	225	250	300	350	400A
114	Venter Housing Gasket		**196012**				**196013**						
115	Venter Housing (with hole for pressure sensor.)	Manufactured after Sept. 22, 2010	**196248**				**259680**						
		Manufactured prior to Sept. 22, 2010	**196248**				**210929**						
116	Static Pressure Tap		**116043**										
117	Venter Motor and Wheel Assembly (includes **117A-L**)	115V/1ph	**214592**		**214593**		**214594**			**214595**			
		208/230V/1ph	**214596**		**214597**		**214598**			**214599**			
		208/230V/3ph											
		460V											
		575V											
117A	Venter Motor	115V/1ph	**260422***		**196036**		**196037**			**196236**			
			*Sizes 75&100 mfgd prior to 10/10, order Kit **P/N 262444**										
		208/230V/1ph	**236160** (replaces 196827)		**236161** (replaces 196828)		**236162** (replaces 196829)			**236163** (replaces 196830)			
		208/230V/3ph											
		460V											
		575V											
117B	Wheel		**135979**, 5-1/16"dia x 2"W				**195666**, 6-5/16"dia x 2"W						
117C	Spacer (isolator bushing)		(3) **194803,** #10x.310										
117D	Venter Motor Clip		(3) **194805** (not needed with 236160 thru 236163 venter motors)										
117E	Venter Motor Mounting Plate		**194806**				**194910**						
117F	Venter Motor Plate Gasket		--	--	--	--	**254935**						
117G	Cooling Fan		**195766**				**196035**						
117H	Motor Mounting Bracket		**195072** (not needed with 236160 thru 236163 venter motors)										
117J	Isolator		(3) **194534**										
117K	Isolator Screw		(3) **202949**										
118	Venter Motor Capacitor	115V/1ph	--	--	**195641**, 4 mfd		**195643**, 7.5 mfd			**195642**, 5 mfd			
		208/230V/1ph	--	--									
		208/230V/3ph	--	--			**195642**, 5 mfd			**195641**, 4 mfd			
		460V	--	--									
		575V	--	--									
119	Transformer for 460 & 575V		**210862**, 200VA							**210863**, 350VA			

Venter Housing and Gasket

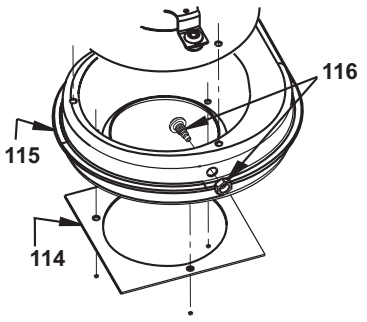

CODE 117 - Venter Motor and Wheel Assembly

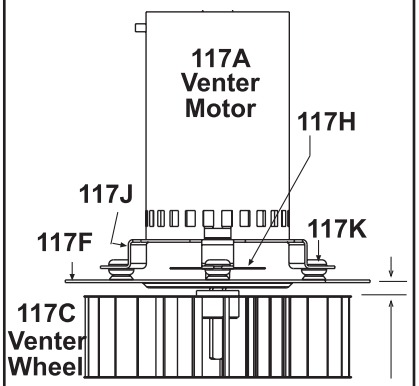

5/16" (8mm) inside - Sizes 75-150
7/16" (11mm) inside - 175-400A

CODE 118 - Venter Motor Capacitor

