

IMPORTANT

1. Always include complete heater model and serial number so that any specification change can be considered for parts shipment. It can save time and expense.
2. Specifications subject to change without notice.
3. We reserve the right to substitute functional replacements.
4. Order by Part Number. Do not order by Option Number.

REZNOR®

MERCER, PA. 16137


**XL, XLB, EEXL,
EEXLB, CXL, CXLB,
CEEXL, CEEXLB**
OBSOLETE PARTS FORM 727-7
OBSOLETE FORM 727-6
APPLIES TO:**Service
Data**
**INDEX
REFERENCE BY
PAGE NUMBER**

	XL	XLB	EEXL	EEXLB	CXL	CXLB	CEEXL	CEEXLB
Blower and Components — Size 30-105		7		7		7		7
Blower and Components — Size 125-400		8-9		8-9		8-9		8-9
Blower Cabinet — Sizes 30-105		21		21		21		
Burner Racks and Carryovers — Sizes 30-105	15	15	15	15	15	15	15	15
Burner Racks and Carryovers — Sizes 125-400	16	16	16	16	16	16	16	16
Cabinet Parts	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5
Drafthoods	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5
ECO Device	19	19			19	19		
Fan and Components	6		6		6		6	
Fan Control	13, 19	13, 19	13, 19	13, 19	13, 19	13, 19	13, 19	13, 19
Flue Baffle Assemblies — Sizes 30-105	5	5			5	5		
Hanger Kits	23	23	23	23	23	23	23	23
Heat Exchangers Baffles	14	14	14	14	14	14	14	14
Heat Exchangers and Related Parts	12-13	12-13	12-13	12-13	12-13	12-13	12-13	12-13
Limit Control	13, 19	13, 19	13, 19	13, 19	13, 19	13, 19	13, 19	13, 19
Motors	6	7-9	6	7-9	6	7-9	6	7-9
Outlet Box	19	19	19	19	19	19	19	19
Outlet Nozzles	22	22	22	22	22	22	22	22
Pilots	17-18	17-18	17-18	17-18	17-18	17-18	17-18	17-18
Rating Plate	2	2	2	2	2	2	2	2
Replacement Parts Tag	2	2	2	2	2	2	2	2
Serial Number Information	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3
Summer-Winter Switch	19	19	19	19	19	19	19	19
Transformers (Control)	20	20	20	20	20	20	20	20
Transformers (KVA)	20	20	20	20	20	20	20	20
Valves (Shutoff)	19	19	19	19	19	19	19	19
Venter (Powered) and Components — Sizes 30-105			10	10			10	10
Venter (Powered) and Components — Sizes 125-400			11	11			11	11
Venter and Venter Adapters For Gravity Units	23	23			23	23		


Additional References:

- Form 701, Replacement Pilots
- Form 702, Replacement Thermostats
- Form 703, Converting to Other Gases
- Form 713, Replacement Fan and Limit Controls
- Form 714, Replacement Gas Valves
- Form 721, Venters and Adapters for Gravity Units
- Form CP-14, Ignition Conversion G65 to G770
- Form CP-15, Ignition Conversion G60AAG to G67/G770
- Form CP-19, Ignition Conversion G60PFH to G770

PILOTS

HORIZONTAL MATCH LIT PILOTS

93. FOR XL, XLB, CXL, CXLB 30 THRU 105

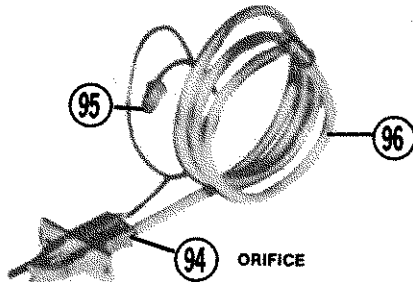


Replacement Kits (includes Codes 93, 95, 96)	Natural	Propane
	110855	110856

Baso #J999HKA

Code	Description	P/N
93	Natural Pilot w/Orifice	40964
	Propane Pilot w/Orifice	40420
94	Natural Pilot Orifice only (4213)	40966
	Propane Pilot Orifice only (4207)	40965
95	Thermocouple, TC2-24"	84761
96	Pilot Tubing 22" Lg.	5145
	Nut with breakaway Ferrule (2 required)	9664

NOTE: Match Lit Pilots are used on XL, XLB, CXL, CXLB units with heater serial number safety pilot code 31.

97. FOR XL, XLB, CXL, CXLB 125 THRU 400

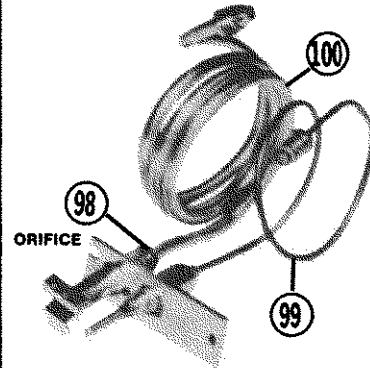

Replacement Kits (includes Codes 97, 99, 100)	Natural	Propane
	110859	110860


Baso #J963HXA

Code	Description	P/N
97	Natural Pilot w/Orifice	17890
	Propane Pilot w/Orifice	46136
98	Natural Pilot Orifice (6218) only	46392
	Propane Pilot Orifice (4211) only	42089
99	Thermocouple, TC2-18"	84760
100	Pilot Tubing 22" Lg.	5145
	Nut with breakaway Ferrule (2 required)	9664


Substitution — Complete Propane Pilot Must be Used in Place of General Controls #26C23114

HORIZONTAL SPARK PILOTS

101. EEXL, EEXLB, CEEXL, CEEXLB 30 THRU 105 AND XL, CXL, CXLB, XLB 30 THRU 105 WITH OPTIONS AH2 AND AH3.

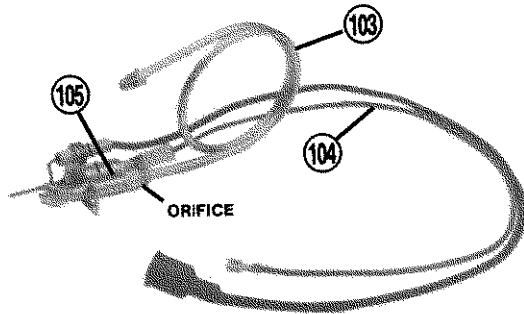

Replacement Kits (includes Codes 101, 103, 104, 105)	Natural	Propane
	110857	110858



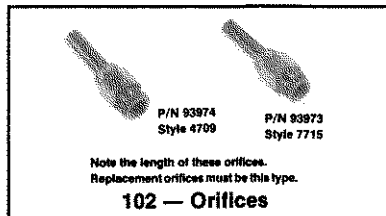


Baso #J983HKW-7715

Code	Description	P/N
101	Natural Pilot w/Orifice (Less Pilot Tubing and Flame Sensor Lead)	93971
	Propane Pilot w/Orifice (Less Pilot Tubing and Flame Sensor Lead) (#J983HKW-4709)	93972
102	Natural Pilot Orifice only (7715)	93973
	Propane Pilot Orifice only (4709)	93974
103	Pilot Tubing 22" Lg.	5145
	Nut with breakaway Ferrule (2 required)	9664
104	Sensor Lead 16" Lg.	50450
105	Flame Probe Y75BA-3	43594

Above Pilot Replaces Baso #J987HKW, Natural Gas P/N 50449 and Propane P/N 51330 and General Controls #26C27113, Natural Gas P/N 73614 and Propane Gas P/N 73615.

106. EEXL, EEXLB, CEEXL, CEEXLB AND XL, CXL, XLB, CXLB 125 THRU 400 WITH OPTIONS AH2 AND AH3.

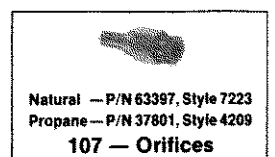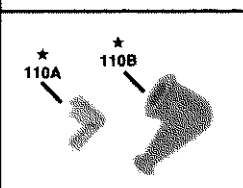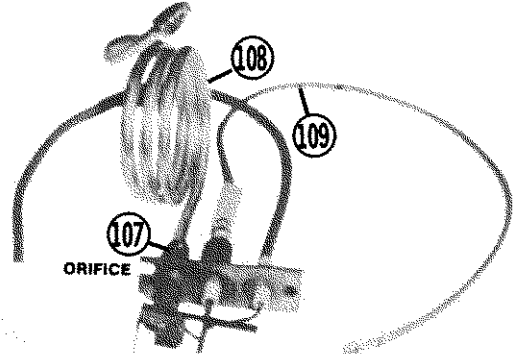

Replacement Kits (include Codes 106, 108, 109, 110)	Natural	Propane
	110861	110862

Baso #J992HXW with Built-In Flame Probe

Code	Description	P/N
106	Natural Pilot w/Orifice	61145
	Propane Pilot w/Orifice	61146
107	Natural Pilot Orifice only (7223)	63397
	Propane Pilot Orifice only (4209)	37801
108	Pilot Tubing 22" Lg.	5145
	Nut with breakaway Ferrule (2 required)	9664
109	Sensor Lead 16"	50450
110A★	Crimp-on, 90° Rajah terminal connector	See instructions on page 18.
110B★	90° Boot terminal protector	112647

Above Pilot Replaces Baso #J994HXW, Natural P/N 47303 and Propane P/N 47384 and Baso #J991XXW Natural P/N 45410 and Propane P/N 45141.

NOTE: Spark Pilots are used on EEXL, EEXLB, CEEXL, CEESLB and XL, XLB, CXL, CXLB units with heater serial number safety pilot codes 40, 41.