



FX-05 & FX-06 CONTROLLERS ARE N/A SOME RETROFITS ARE AVAILABLE



IMPORTANT

1. Always include complete heater model and serial number so that any specification change can be considered for parts replacement. It can save time and expense.
2. In keeping with our policy of continuous product improvement, we reserve the right to alter any information shown here. Specifications are subject to change without notice.
3. We reserve the right to substitute functional replacements
4. Order by P/N; not Heater Option Designation.

Replacement Parts

Applies to: Indoor Model PDH,
Model SDH, Model PEH,
Model PXH, and Model SHH; and
Outdoor Model RDH, Model REH,
Model RXH, and Model RHH

Indoor Models



SDH
Gas-Fired
Heat,
Separated
Combustion



PDH
Gas-Fired
Heat, Power
Vent



PEH
Electric
Heat



PXH
Air
Handler



SHH
Gas-Fired
Heat, High
Efficiency,
Separated
Combustion

Outdoor Models



RDH, Gas-Fired Heat, Power-
Vented (with outside air hood
attached)



REH
Electric
Heat



RXH
Air Handler
(with hood)



RHH Gas-Fired Heat, High-
Efficiency, Power Vented
(outside air hood attached)

Index

A

Air Proving Switch 3
Amplifiers 11
AquaSaver Timed Controls 44

B

Ball Joint 29
Ball Valve 5
Ball Valve Actuator 5
Bearings 20
Belts 21
Bleed Line Hose 44
Blowers 20
Burner Assembly 20
Burner End Shield 19
Burner Shield 19

C

Cabinet Doors 36
Cabinet Parts - Cooling Coil Module 24
Cabinet Parts - Indoor High-Efficiency Model SHH 42
Cabinet Parts - Indoor Model PDH 38
Cabinet Parts - Indoor Model PEH 40
Cabinet Parts - Indoor Model SDH 39
Cabinet Parts - Mixing Box 30
Cabinet Parts - Outdoor High-Efficiency Model RHH 42
Cabinet Parts - Outdoor Model RDH 37
Cabinet Parts - Outdoor Model REH 41
Cabinet Parts for Option ECC Evaporative Cooling Module 43

Capacitor 16, 27
Reheat Compressor 27
Contactors 7, 13
Convenience Outlet 9
Crankcase Heater 27
Curb Adapter 35

D

Mixing Box Damper Controls 29
Damper Arm 29
Damper Assy (Option AR8) 28
Damper Rod 29
Dampers 29, 30
Dehumidist, Option CL47 12
Digital Controller FX05 for Opt DG 6
Dirty Filter Switch 3
Discharge Air Sensor 6
Discharge Plenum 32
Distribution Block 7
Door 30, 32
Door Latch 30, 32, 36
Door Switch 9
Downturn Plenum 32
Drain Cover 19
Drain Fitting 19
Drain Gasket 19
Condensate Drain Freeze-Resistant Trap 19
Drive Components 21
DSI (Direct Spark Ignition) Control Board 3
Duct Flange 28, 32
Ductstat 5, 10
Ductstat Stage Adder 10

E

Economizer Logic Module 29, 30
Electrical Component Locations 3
Electric Heating Element 7
Electric Heating Element Limit Control 7
Electric Heat Section Electrical Compartment 6, 7
Electrode 20
Electronic Filter 6
Enthalpy Sensor 29
Evaporative Cooling Media Pads 43
Evaporative Cooling Module 43

F

Feed Line 44
Fill and Drain Kits 45
Electronic Filter 5
Filter Drier 27
Filters 28
Firestat 10
Flame Sensor 20
Float Switch 44
Float Valve 44
Flue Collection Box 19
Freeze Protection Controls 45
Freezestat 5
Frostat 26, 27
Fuse 3, 7

G

Gas Conversion Kits 20
Gas Pressure Switch 5
Gas Valve (See Form P-VALVES) 5

H

Heat Exchanger 18, 19
High Ambient Limit Control 10
Hinge 36
Inlet Air Hood (Option AS2) 28
Horizontal Vent/ Combustion Air Terminal Kit (Same as Option CC6) 18
Rubber Hose 44

I

ID Plug 4
Inlet Screen 28

L

Label 36
High Temperature Auto Reset Limit 3
Reverse Flow Limit Switch 9
Louvers 32, 33

M

Manifold Arrangement -- 8:1 Turndown 5
Media 43
Microprocessor Timer 44
Modulating Gas Valve 5
Damper Motor 29
Discharge Damper Motor 32
Motor Base 20
Blower Motors 13, 16

N

Nozzles 32, 33

O

Gas Orifice 20
Orifice Adapter Bushing 20
Outside Air Relative Humidity Transmitter, Option DT5 12
Overloads 13

P

Paint 36
Phase Loss Control 3
Plug-in Cards 6
Potentiometer 29
Pre-Filters (Option PF4 and PF5) 43
Combustion Air Pressure Switch 3, 4
Pulleys 21
Pump 44
Pump and Float Control 44
Pump Support 44

R

Rating Plate 2
DX Cooling Cabinet with Reheat 27
Relay 3, 4, 7, 45
Time Delay Relay 5
Remote Console 12
Remote User Interface 12

Primary Air Restrictor 20
Return Air Controller 29
Reverse Flow Limit Switch 9
Roof Curb 34, 35, 36
Room Command Module 12

S

Intake Screen 44
SCR Power Controller 7
Sensing Tube Assembly 21
Sensor 10, 11
Sensor Mixing Tube Holder 6
Serial No. 2
Service Switch 9
Damper Motor Connecting Shaft 29
Shaft (Blower) 21
Signal Conditioner 5
Smoke Detector 10
2-Way Solenoid Valve 45
3-Way Solenoid Valve 45
Spring Isolation 20
Sprinkler Pipe 44
Starters 13
Step Controller 7
Disconnect Switch 13
Pressure Null Switch 29
Pressure Switch (refrigerant) 27
2-position Switch 10

T

Static Pressure Tap 16
Temperature Controller 45
Terminal Block 44
Terminal Board for Thermostat 3
Thermostatic Expansion Valve for Reheat Circuit 27
Thermostats 12
Time Delay Relay 5, 6
Transducer 5
Transformer 3, 4, 7, 16, 44

U

Ultra-Violet, Germicidal Light 27

V

Ball Valve 44
Variable Frequency Drive 3, 4
Vent/Combustion Air Kits - SDH & SHH 17
Vent Cap 17
Venter Block Assembly 17, 42
Venter Components 16, 17
Venter Housing 16, 17
Venter Motor 16, 17
Venter Motor and Wheel Assembly 16, 17
Venter Motor Capacitor 16
Venter Speed Controller 6
Vertical Vent - Model RDH 17
Vertical Vent/Combustion Air Terminal Kit (Same as Option CC2) 17, 18

W

Water Hammer Arrestor 44
Wheel 16, 17

Cooling Coil Cabinet Module (Option AU) (cont'd)

Ultra-Violet, Germicidal Light for Cooling Coil, Option UV2 (in the Blower Section)

CODE	Description	PDH/SDH/RDH	75/100	125/150	175/200/225	250/300/350/400
		SHH/RHH	--	--	130/180	260/350
		PXH/RXH	000A	000B	000C	000D/000E
		PEH/REH	10A/20A/30A	15B/30B/60B	N/A	30D/60D/90D/120D/40E/80E/120E
190	UVC Bulb, Steril-Aire #GTD VO		220440	220441	(2) 220440	(2) 220442
			22" (559mm)	34" (864mm)	22" (559mm)	40" (1016mm)
191	Light Fixture, 115/208/230V Steril-Aire #DE-		220434	220435	(2) 220434	(2) 220436
			241VO	361VO	241VO	421VO
64	(See page 10.) Blower Door Interlock Safety Switch - All Sizes, P/N 217262					

190

191

64



Electrical Components in a DX Cooling Cabinet with Reheat

CODE	Description	PDH/SDH/RDH	75/100	125/150	175/200/225	250/300	350/400A
		PXH/RXH	000A	000B	000C	000D	000E
		SHH/RHH	--	--	130/180	260	350
		PEH/REH	10A/20A/30A	15B/30B/60B	N/A	30D/60D/90D/120D	40E/80E/120E
200	Reheat Compressor	208/1/60 (AK2)	216673			216685	
		230/1/60 (AK3)					
		208/3/60 (AK5)	216674			216686	
		230/3/60 (AK6)					
		460/3/60 (AK7)	216675			216687	
		575/3/60 (AK8)					
201	Molded Plug for above Compressor	208/1/60 (AK2)	234063				
		230/1/60 (AK3)					
		208/3/60 (AK5)	208374				
		230/3/60 (AK6)					
		460/3/60 (AK7)					
		575/3/60 (AK8)					


CODE 200 - Compressor



CODE 201 - Molded Plug for Compressor



CODE 204 - Crankcase Heater

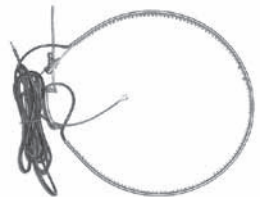

CODE	Description	PDH/SDH/RDH	75/100	125/150	175/200/225	250/300	350/400A
		PXH/RXH	000A	000B	000C	000D	000E
		SHH/RHH	--	--	130/180	260	350
		PEH/REH	10A/20A/ 30A	15B/30B/ 60B	N/A	30D/60D /90D/120D	40E/80E/120E
202	Start Capacitor	208&230/1/60 (AK2 & AK3)	234065			234066	
203	Run Capacitor	208&230/1/60 (AK2 & AK3)	234067			234068	
204	Crankcase Heater	208&230/1&3/60 (AK 2, 3, 5, 6)	216434			216398	
		460/3/60 (AK7)	216436			216400	
		575/3/60 (AK8)	216437			216401	
205	High Pressure Switch (manual reset)		216379				
206	Low Pressure Switch (auto reset)		216380				
207	Reheat Evaporator Coil		216440	216441	216442	216443	216444
208	Reheat Condenser Coil		216445	216446	216447	216448	216449
209	Thermostatic Expansion Valve for Reheat Circuit	208&230/1&3/60 (AK 2, 3, 5, 6)	220552, BBIZE-2			220554, BBIZE-4	
		460/3/60 (AK7)				234052, BBIZE-5	220554, BBIZE-4
		575/3/60 (AK8)				220554, BBIZE-4	
210	Filter Drier		177379, Sporlan C-164-S			216408, Sporlan C-304-S	
211	Frostat, opens @35°F; closes @50°F		177233, Model 3NT015				
212	DH Relay		234656				
213	FX06 Controller with Software - See P/N by Option D12 B, C, D, E, F, or G (Code 33, page 6, or Code 38, pages 6-7)						
214	Electric Bypass Valve (Modulating Reheat AUR1)		234062				

CODE 205 - High Pressure Switch, P/N 216379 (manual reset)



CODE 206 - Low Pressure Switch P/N 216380 (auto reset)



CODE 209 - Thermostatic Expansion Valve for Reheat Circuit



CODE 214 - Electric Bypass Valve in Option AUR1, P/N 234062



CODE 210 - Filter Drier



CODE 211 - Frostat, P/N 177233



CODE 212 - Relay, P/N 234656

